

MotorsHOWTO

- [How to set the updated precision of the motor position shown in spock during umv / umvr](#)

How to set the updated precision of the motor position shown in spock during umv / umvr

When moving a motor using umv or umvr the position of the motor is shown during the movement. By default this value is updated only when a change in the second digit behind the comma is reached. This precision can be changed in the pool using jive. Choose the pool server (not ZMX or OmsVme58):

